

BLITZ

MICROWAVE OVEN 20L





INSTRUCTION MANUAL





PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE

SQIM 5642-5643-9230 05-09-2022 V6 | © 2022 SQ Professional Ltd

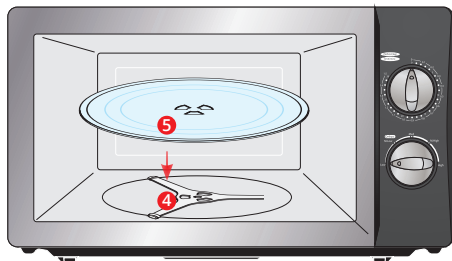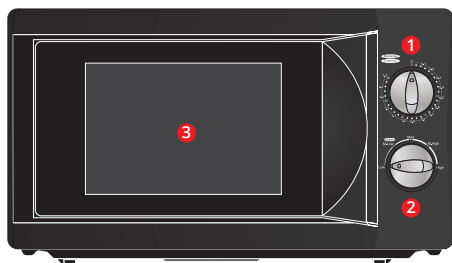

FEATURES

- 1 Timer
- 2 Power Selector
- 3 Door
- 4 Roller
- 5 Turntable

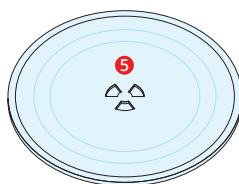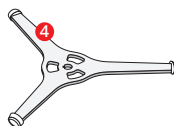

Due to hot parts and potential hazards, this appliance should not be used by children under 16 years old unless supervised by an adult.

Please keep the appliance and mains cable out of the reach of children. **This is not a toy!**

If used by persons with reduced physical, sensory or mental capabilities, instruction and supervision must be given to understand the use of the appliance and the hazards involved.

Always disconnect the appliance from the power socket if it is left unattended and before assembling, disassembling or cleaning.

If the mains cable is damaged, it must be replaced by qualified persons in order to avoid any hazards.

IMPORTANT SAFEGUARDS

Do not use the appliance in a bathroom, near water, or outdoors. Do not operate the appliance with wet hands or bare feet.

Do not immerse any of the parts (appliance, mains cable, plug) in water or other liquids during use to protect from fire, electric shock and personal injury.

Do not use the appliance if damaged or malfunctioning.

Do not leave the appliance unattended whilst in use. Use and store it out of reach of children.

Microwave oven could be harmful for people wearing pacemakers.

Never use corrosive chemicals or vapours in the microwave oven.

Do not use any metal cookware or accessories in the microwave oven. Always use microwave safe containers and leave an opening or pierce pouches and covers to allow the steam to escape.

Do not cover the rear ventilation slots with anything flammable to avoid the risk of fire as hot air is evacuated from the microwave oven.

Do not install microwave oven inside a cupboard or over a cooktop or other heat-producing appliance.

If the contents of the oven catch fire, keep the door closed and turn the oven off at the wall switch or shut the power off at the fuse or circuit-breaker.

- This appliance is intended for household use only.
- Ensure that the appliance is always placed on a firm and flat surface, away from any edges of the worktop. Do not place the appliance onto a metal tray or metal surface whilst in use. Do not place the appliance on, or near, a hot gas or electric burner or in a heated oven.
- Keep the appliance and mains cable away from the edges of worktops and out of reach of children. Route the mains cable so it does not overhang, and cannot be tripped over or caught.
- Do not let the mains cable run across an open space, such as between a low power socket and a table, or across any hot area, such as a cooker. Heat may damage the mains cable.
- The connections on both sides of the mains cable (the appliance and the power socket) should never be strained. If the mains cable is damaged it must be replaced by a qualified person or service to avoid any hazards.
- This appliance must not be operated by an external timer or a remote control system.
- Do not use the microwave oven for any reason other than preparing food.
- Avoid placing the microwave oven near TV or electronic devices as it can cause interference.
- Always ensure that there is at least 30cm open space above the top surface of the oven and 10cm clearance between each side of the oven and any adjacent wall.
- Ensure that the turntable ❶ and roller ❷ are in place when using the microwave oven.
- Do not operate the microwave while empty. Operating the oven with no food or food that is extremely low in moisture can cause fire, charring or sparking.
- Always allow appropriate resting time after oven has switched off to allow the heat to be distributed evenly throughout the food.
- When opening the door ❸ stand at arm's length to avoid scalding with steam or hot air. Use oven gloves when removing any cookware from oven to prevent burning or scalding.
- Do not overcook food. If paper, plastic, or other combustible materials are used in the oven check the food in regular intervals.
- Do not cook any food in pouches, bags or wraps, such as egg yolks, potatoes or ready-made meals without piercing them to prevent the build-up of steam.
- Remove foil and twist wires from bags before placing food into the microwave oven.
- Never leave the appliance unattended while it is cooking.
- If the door ❸ or the door seal is damaged, the microwave oven must not be operated until it has been repaired by the manufacturer, or authorised person or service centre in order to avoid hazard.
- Ensure that the turntable ❶ and roller ❷ are not cracked, chipped or broken. If this happens, contact your nearest authorised service centre.
- Clean the microwave oven regularly to ensure that any food deposits are removed.
- Read all operating instructions before using the appliance.

AVOID MICROWAVE EXPOSURE

Failure to follow these safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the microwave oven with the door ❸ open or to tamper with the safety interlocks (door latches) or insert anything into the safety interlock holes.
- Do not place any object between the microwave oven door ❸ and front face or allow food or detergent residues to accumulate on sealing surfaces. Ensure that the door ❸ and door sealing surfaces are kept clean by wiping after use with a damp cloth and dried with a soft cloth.
- It is important that the microwave oven door closes properly and that there is no damage to the door, power cable, door hinges, and door seal.

INSTALLATION

- Remove all the packaging materials from inside the oven. Place the roller ❷ on the bottom of the microwave and turntable ❶ on top of it.
- This microwave oven weighs approximately 10kg and it should be placed on a stable horizontal surface, strong enough to support this weight.
- The microwave oven must be placed away from high temperatures and steam or damp surroundings.
- Make sure there is adequate ventilation for your oven by leaving at least 10cm of space behind and, on the sides of the oven and 20cm of space above and 85cm of the floor.

MICROWAVE POWER GUIDE

Use the table below to inform which power level you require while cooking food. Always follow the instructions provided on food labels.

LOW	17% power output
MEDIUM LOW	36% power output
MEDIUM	55% power output
MEDIUM HIGH	77% power output
HIGH	100% power output
DEFROST	36% power output

SPECIFICATIONS

Rated Voltage: 220-240V~
 Frequency: 50Hz
 Rated Power: 700W
 Capacity: 20L

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

OPERATING INSTRUCTIONS

Do not cook food directly on the turntable ❸ as it will make the turntable ❸ very hot which can cause damage. Eggs in shells and whole hard-boiled eggs should not be heated in microwave ovens as they may explode.

The contents of baby bottles and baby food jars must be carefully checked before consumption to prevent burns.

Do not heat narrow-necked containers such as bottles.

Do not attempt to deep-fry in the microwave oven.

Microwave heating beverages can result in delayed boiling, so care must be taken when handling the container.

- Put the food to be cooked into a suitable microwave-safe container, place it in the middle of the turntable ❸ and close the door. Ensure that the turntable is secure on the roller ❶.
- Turn power selector ❷ to the required power level.
- Select required cooking time by turning the timer ❶ to the desired position. If the cooking time is under 5 mins, turn the timer ❶ past the 5 min mark, then return to the correct timing. The appliance will only start cooking once the timer is set.
- If the door ❹ is opened during cooking, the appliance will stop working automatically and will continue once the door is shut.
- After removing the food from the microwave oven always return the timer ❶ to zero position.

CARE AND MAINTENANCE

Do not use harsh cleaners or scouring pads on any part of your microwave oven. Do not remove the waveguide cover.

- Wipe the exterior of the microwave oven with a damp cloth, and dry it with a soft cloth.
- Wipe the glass panel on the door with a damp cloth until it becomes clean. Avoid using excessive amounts of water to clean the oven control. Do not use chemical or abrasive cleaning agents.
- To remove all traces of dirt, regularly clean both sides of the door, the door seals and sealing surfaces with a soft, damp cloth.
- Wipe any splatters or spills from the inside with a soft damp cloth or sponge after each use while the oven is still warm. For heavier spills, use a mild detergent and wipe several times with a damp cloth until all residue is removed.
- Ensure that detergent or water does not enter the perforation in the cavity walls which may cause damage to the oven.
- Wash the turntable ❸ and the roller ❶ in warm soapy water.
- Remove odours from the microwave oven by adding 1 cup of water, juice and skin of one lemon into a microwaveable bowl. Microwave for 5 minutes, wipe thoroughly and dry with a soft cloth.

ELECTRICAL

The product must only be used with the fuse cover fitted.

Should the power cable or the power plug become damaged, arrange for these to be replaced by Customer Service or a qualified person before continuing to use the appliance. The appliance is fitted with a 13A fuse (BS1362) in a 13A plug (BS1363).

ENVIRONMENTAL

To reduce environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with the symbol below must not be disposed of with unsorted municipal waste. Please repair, reuse or recycle appropriately.



SERVICE

The product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer.

If that does not solve the problem ring Customer Service – they may be able to offer technical advice. Please have the Model Number to hand, as they will not be able to help you without it.

If you are advised to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem.

If under a guarantee, say where and when it was purchased and include a valid VAT receipt. Send it to SQ Professional Ltd.

GUARANTEE

The guarantee for this product is covered by SQ Professional Limited. Any faults with this product arising through a manufacturer defect will be covered for 1 year from the date of purchase, subject to a valid VAT receipt being presented. This does not include faults or damage caused by misuse of general wear and tear. SQ Professional Ltd will not be held liable for general wear and tear, or eventual damages to persons, animals or objects caused by incorrect installation or deriving from improper, erroneous or unreasonable use.

Please contact customer services on 01992 716 070 or send an e-mail to info@sqprofessional.com, Monday to Friday from 09:30 - 17:30. This does not affect your statutory rights.



SCAN THE QR CODE TO EXPLORE
OUR FULL PRODUCT RANGE.

Voltage Business Centre, Units 1 - 3
6 Mollison Avenue, Enfield, EN3 7XQ
T: 01992 716 070 | F: 01992 700 538 | info@sqprofessional.com

WWW.SQPROFESSIONAL.COM

