




COFFEE GRINDER

INSTRUCTION MANUAL



PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USE.

SQIM 5687-5688-5689 28-03-2023 V12 | © 2023 SQ Professional Ltd

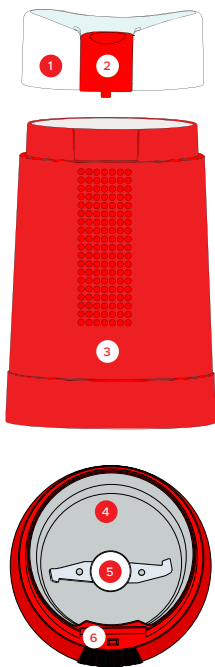

FEATURES

- 1 Transparent lid
- 2 Grinding button
- 3 Motor unit
- 4 Grinder unit
- 5 Stainless steel blades
- 6 Safety switch



SHARP BLADES!

IMPORTANT SAFEGUARDS

Do not use the appliance in a bathroom, near water, or outdoors. Do not operate the appliance with wet hands or bare feet.

Do not immerse any of the parts (appliance, mains cable, plug) in water or other liquids during use to protect from fire, electric shock and personal injury.

Do not use the appliance if it is damaged or malfunctioning.

Do not leave the appliance unattended whilst in use. Use and store it out of reach of children. Blades are very sharp, handle with care.

Due to sharp parts and potential hazards, this appliance should not be used by children under 16 years old unless supervised by an adult. Please keep the appliance and mains cable out of the reach of children. **This is not a toy! If used by persons with reduced physical, sensory or mental capabilities, instruction and supervision must be given to understand the use of the appliance and the hazards involved. Always disconnect the appliance from the power socket if it is left unattended and before assembling, disassembling or cleaning. If the mains cable is damaged, it must be replaced by qualified persons in order to avoid any hazards.**

- This appliance is intended for household use only.
- Do not use this appliance for any other purpose than its intended use.
- Ensure that the appliance is always placed on a firm and flat surface, away from any edges of the worktop. Do not place the appliance onto a metal tray or metal surface whilst in use. Do not place the appliance on, or near, a hot gas or electric burner or in a heated oven.
- Keep the appliance and mains cable away from the edges of worktops and out of reach of children. Route the mains cable so it does not overhang, and cannot be tripped over or caught.
- Do not let the mains cable run across an open space, such as between a low power socket and a table, or across any hot area, such as a cooker. Heat may damage the mains cable.
- The connections on both sides of the mains cable (the appliance and the power socket) should never be strained. If the mains cable is damaged it must be replaced by a qualified person or service to avoid any hazards.
- This appliance must not be operated by an external timer or a remote control system.
- Switch off the appliance and unplug from the power socket before approaching parts that move while in use. Unplug the appliance when not in use.
- Ensure that the appliance has come to a complete stop before cleaning and storing away. Keep the transparent lid ❶, motor unit ❸, mains cable, and plug away from sources of heat. Store in a dry place.
- Ensure that the transparent lid ❶ is securely in place before you operate the appliance.

Do not use the appliance if the transparent lid ❶ is damaged in any way.

- Use only the transparent lid ❶ supplied with this motor unit ❸ (and vice versa) and do not tamper the motor unit ❸ in any way.
- Do not use your Blitz Coffee Grinder for longer than 30 seconds at the time. A minimum of 1 minute rest in between two consecutive cycles is required.
- Read all operating instructions before using the appliance.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

OPERATING INSTRUCTIONS

Do not exceed 30 seconds of grinding at one time.

Do not grind extremely hard ingredients or those that are moist, sticky or oily.

Do not use the appliance for chopping, mincing or pureeing soft foods, or making pastes out of grains or seeds.

- Remove the transparent lid ❶, and fill it flat to the rim and pour the contents into the grinder unit ❹ before replacing the transparent lid ❶.
- Hold the Blitz Coffee Grinder with one hand to stabilise it, then press and hold the grinding button ❷ until the desired consistency has been reached.
- Releasing the grinding button ❷ will stop it.
- To empty the grinder unit ❹ carefully detach the transparent lid ❶ from the motor unit ❸ and scoop the ground coffee beans out.
- Use only enough of coffee beans for one use, depending on the method and pot size you are using for brewing coffee. If you are brewing a large pot of coffee you

may need to grind beans in several batches.

CLEANING

Do not immerse the motor unit ③ in water.

Unplug the appliance from the power socket. Wipe the motor unit ③ with a damp cloth and dry with a soft cloth. Wash the transparent lid ① with warm soapy water, rinse and dry thoroughly.

Wipe the stainless steel blade ⑤ and grinding unit ④ with a damp cloth or a paper towel to remove any excess of ground coffee. Use a small, dry brush to remove the particles stuck under the blades ⑤. Never pour water or any other liquid into the grinder unit ④.

SPECIFICATIONS

Rated Voltage:	AC 220-240V
Frequency:	50/60Hz
Rated Power:	150W
Maximum capacity:	45g

ELECTRICAL

The product must not be used without the fuse cover fitted.

Should the power cable or the power plug become damaged, arrange for these to be replaced by Customer Service or a qualified person before continuing to use the appliance. The appliance is fitted with a 3A fuse (BS1362) in a 3A plug (BS1363).

ENVIRONMENTAL

To reduce environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with the symbol below must not be disposed of with unsorted municipal waste. Please repair, reuse or recycle appropriately.



SERVICE

The product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer. If that does not solve the problem ring Customer Service – they may be able to offer technical advice. Please have the **Model Number** to hand, as they will not be able to help you without it. If you are advised to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem. If under a guarantee, say where and when it was purchased and include a valid VAT receipt. Send it to SQ Professional Ltd.

GUARANTEE

The guarantee for this product is covered by SQ Professional Limited.

Any faults with this product arising through a manufacturer defect will be covered for 1 year from the date of purchase, subject to a valid vat receipt being presented. This does not include faults or damage caused by misuse of general wear and tear. SQ Professional Ltd will not be held liable for general wear and tear, or eventual damages to persons, animals or objects caused by incorrect installation or deriving from improper, erroneous or unreasonable use.

Please contact customer services on 01992 716 070 or send an e-mail to info@sqprofessional.com, Monday to Friday from 09:30 - 17:30.

This does not affect your statutory rights.



SQ Professional Ltd, Voltage Business Centre,
Units 1 - 3, 6 Mollison Avenue, Enfield, EN3 7XQ, UK
T: 01992 716 070 | F: 01992 700 538

E: info@sqprofessional.com

WWW.SQPROFESSIONAL.COM

All images are for illustration purposes only. Actual products may vary.