

dainty™
LEGACY TOASTER


SQ professional®

INSTRUCTION MANUAL



BEFORE OPERATING THIS UNIT, PLEASE CAREFULLY READ THE FOLLOWING INSTRUCTIONS.

Features

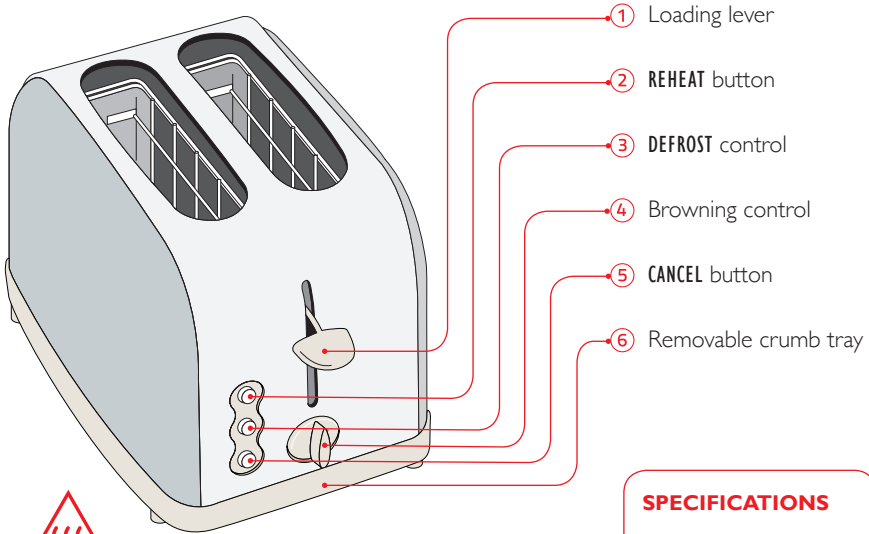

HOT SURFACE!

SPECIFICATIONS

Rated Voltage: **220-240V**
 Frequency: **50Hz**
 Rated Power: **900W**

Read the instructions and keep them safe. Remove all packaging before use.

IMPORTANT!

Due to hot parts and potential hazards the appliance is not suitable for the use of children under 8 years old. Even when off please keep the appliance and cord out of the reach of children. Children over 8 must be supervised by an adult at all times when using or cleaning the appliance. This is not a toy! The appliance can be used by persons with reduced physical, sensory or mental capabilities if they have been given supervision and instruction and understand the use and hazards involved.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:


- 1 When using your toaster please take note that it is a stainless steel product and **will get hot when used.**
- 2 Always ensure that the voltage on the rating label corresponds with the mains voltage in your home.
- 3 Read all instructions carefully before using any appliance. Incorrect operation and improper use can damage the appliance and cause injury to the user.
- 4 The appliance is intended **for household use only**. Commercial use voids the warranty and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than intended.
- 5 Avoid any contact with moving parts.
- 6 The toaster must only be used by or under the close supervision of a responsible adult. Use and store it out of reach of children as after use it will still be hot.
- 7 Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified person in order to avoid electrical hazard.
- 8 Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- 9 **To reduce the risk of electric shock, do not immerse or expose any parts, stand, cable, or plug in liquid.**
- 10 **Never immerse the unit in water or any other liquid for cleaning purposes.**
- 11 Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- 12 The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- 13 A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- 14 Do not let the cord hang over the edge of a table or worktop. Ensure that the cord is not in a position where it can be pulled on inadvertently, especially by children.
- 15 Do not allow the cord to touch hot surfaces and do not place on or near a hot glass or electric cooker or in a heated oven.
- 16 **Do not use the appliance on a gas or electric cook top or over or near and open flame.**
- 17 Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance, this to avoid overheating of the extension lead, appliance or plug point. Always ensure that the extension lead is secure.
- 18 **Do not place the extension lead in a position where it can be pulled on by children, animals, or tripped over.**

FOR HOUSEHOLD USE ONLY

Operating your toaster

- 1 Only connect the unit to a properly installed and earthed power socket.
- 2 To select preferred toasting level, turn the selector ④ clockwise from the lightest level 1 to the darkest level 5. If you are not sure, start with a lower level.
- 3 Insert one slice of bread per slot and lower the slot with the lever ① until it snaps into place.
- 4 The unit starts to toast and switches off automatically at the end. The toasted bread pops up automatically.
- 5 Allow the unit to cool down after use or before you put it away.
- 6 To use the special functions press the relevant button after lowering the lever ①. The corresponding LED signals its activation:
 - REHEAT** ②: to warm bread already toasted
 - DEFROST** ③: to defrost and toast frozen bread.
 - CANCEL** ⑤: to stop the toasting procedure manually.

Cleaning

- 1 Pull the plug out of the mains socket before you clean the unit and always allow the unit to cool down.
- 2 Only use a slightly damp cloth to clean the outside of the unit.
- 3 Pull the crumb tray  out, remove any bits of bread and put the tray back in.


Servicing the appliance

There are no user serviceable parts in this appliance. If the unit is not operating correctly, please check the following:

- 1 Have you followed the instructions correctly?
- 2 Is the unit wired correctly and has the power point been turned on?
- 3 Is the plug firmly in the mains socket?

If the appliance still does not work after checking the above, consult the retailer for possible repair or replacement.

Wiring instructions - UK plugs only

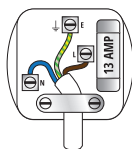

The product must be earthed. It has a **13A BS1362** fuse in a 13A BS 1363 plug. To replace the fuse, comply with the standard 13A BS1362 for fuse replacement. If in doubt, call an electrician. Do not open the plug.

Environmental protection



To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.

Service

If you ring Customer Service, please have the **Model No.** to hand, as we won't be able to help you without it. The product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer. If that does not solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem. If under a guarantee, say where and when it was purchased and include proof of purchase. Send it to SQ Professional Ltd.

WARRANTY

THE WARRANTY FOR THIS PRODUCT IS COVERED BY SQ PROFESSIONAL LIMITED. ANY FAULTS WITH THIS PRODUCT ARISING THROUGH A MANUFACTURER DEFECT WILL BE COVERED FOR 1 YEAR FROM THE DATE OF PURCHASE, SUBJECT TO A VALID PROOF OF PURCHASE BEING PRESENTED. THIS DOES NOT INCLUDE FAULTS OR DAMAGE CAUSED BY MISUSE OF GENERAL WEAR AND TEAR. PLEASE CONTACT CUSTOMER SERVICES ON 01992 716 070 OR SEND AN E-MAIL TO INFO@SQPROFESSIONAL.COM, MONDAY TO FRIDAY FROM 09:30 - 17:30. THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.



RoHS
2011/65/EU
AC 220-240V ~ 50Hz



 **professional**®

Voltage Business Centre, Units 1 - 3
6 Mollison Avenue • Enfield EN3 7XQ
T: 01992 716 070 • F: 01992 700 538
info@sqprofessional.com
www.sqprofessional.com