


SFERA MARBLE KETTLE

INSTRUCTION MANUAL



BEFORE OPERATING THIS UNIT, PLEASE CAREFULLY READ THE FOLLOWING INSTRUCTIONS.

Features

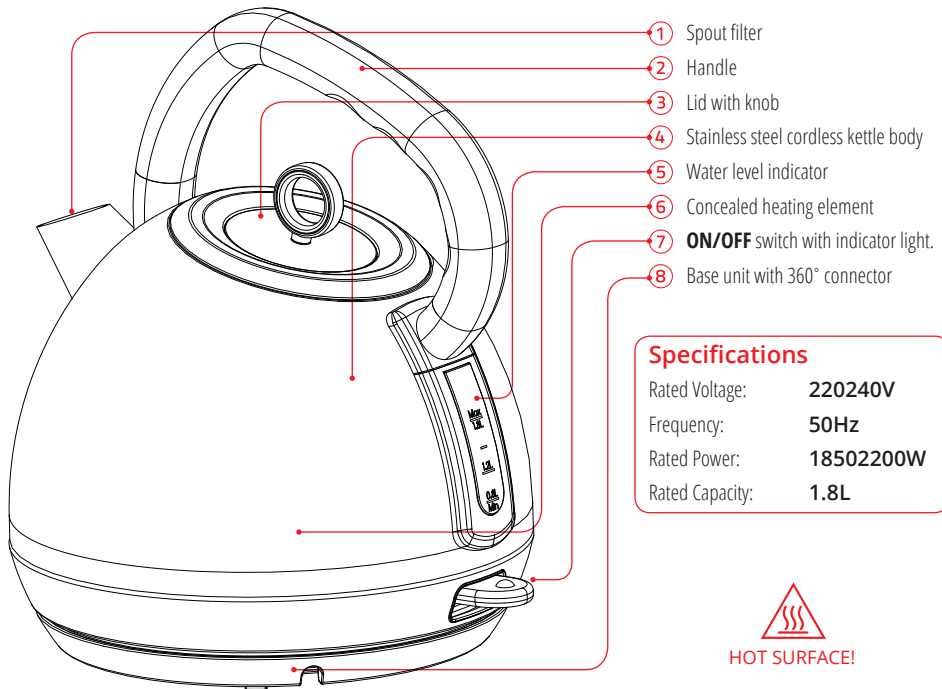

Specifications

Rated Voltage:	220240V
Frequency:	50Hz
Rated Power:	18502200W
Rated Capacity:	1.8L



READ THE INSTRUCTIONS AND KEEP THEM SAFE. REMOVE ALL PACKAGING BEFORE USE.

IMPORTANT!

Due to hot parts and potential hazards the appliance is not suitable for the use of children under 8 years old. Even when off please keep the appliance and cord out of the reach of children. Children over 8 must be supervised by an adult at all times when using or cleaning the appliance. This is not a toy!

The appliance can be used by persons with reduced physical, sensory or mental capabilities if they have been given supervision and instruction and under base unit the use and hazards involved.

⚠ Important Safety Instructions

Please follow the safety rules when using any electrical appliances to avoid any danger, injury to a person or the appliance.

- 1 This appliance is intended for household use only. It is not suitable for commercial use such as staff kitchen areas and other working environments.**
- 2** Ensure that the appliance is always placed on a firm and flat surface, away from the edge of the work top. Do not place the appliance onto a metal tray or metal surface whilst in use. Do not place the appliance on, or near, a hot gas or electric burner or in a heated oven.
- 3** Keep the kettle, base unit, and mains cable away from the edges of work tops and out of reach of children. Route the cable so it does not overhang, and cannot be tripped over or caught.
- 4** Do not let the cable run across an open space, such as between a low socket and a table, or across any hot area, such as cooker. Heat may damage the supply cord.
- 5 Do not use the kettle in a bathroom, near water, or outdoors. Do not immerse any of the parts (appliance, supply cord, plug) in water or other liquids to protect against fire, electric shock and personal injury.**
- 6** The top of the base unit **8** should always be kept dry, especially around the connection area. Before drying, disconnect the power supply. Ensure that it is completely dry before you reconnect the appliance to the power supply.
- 7** The connections on both sides of the mains cable (the appliance and socket) should never be strained. If the mains cable is damaged it must be replaced by qualified person or service to avoid any hazards.
- 8 The kettle must only be used by, or under the supervision of, a responsible adult. Use and store it out of reach of children.**
- 9** Pour water out of the kettle slowly and carefully, do not overtilt or tip the kettle too fast in order to prevent spillage and splashing. Remove the kettle from its base unit **8** before filling or pouring.
- 10** Do not move the kettle when it is switched on. Use extreme caution when moving a kettle containing hot water.
- 11** Do not switch the kettle on unless it contains at least two cups of water. Avoid filling it above the **MAX** mark to prevent the hot water spewing out. Remove the kettle from the base unit **8** before you fill it with water.
- 12** Always close the lid **3** and have the filter **1** in place before you switch the kettle on. Do not open the lid **3** whilst the water is boiling. Avoid contact with steam while the water is boiling and after the kettle is switched off.
- 13** Use the handle **2** and knobs **3** on the appliance and avoid touching any hot surfaces.
- 14** The switch **7** should never be held fixed in the **ON** position as this may cause damage to the switchoff mechanism.
- 15** Do not remove the kettle off from its base unit **8** without switching it off first. Unplug the base unit when not in use.
- 16** Unplug the appliance from the outlet before cleaning or removing any parts. Ensure that the kettle is completely cooled down before cleaning and storing away. Keep the kettle, base unit, cable, and plug away from sources of heat.
- 17** Do not use the kettle for any purpose other than heating water.
- 18** Use the kettle only with the base unit supplied (and vice versa) and do not tamper with the connector in any way.
- 19** This appliance must not be operated by an external timer or remote control system.
- 20** Do not use the kettle if it's damaged or malfunctions. Do not leave the appliance unattended whilst in use.

FOR HOUSEHOLD USE ONLY

Scalding

A scald hazard can last for long time after boiling. Take care when opening the lid **3 as steam will escape from the opening. If this does happen run cold water over the affected area immediately. Do not stop to remove clothing and seek medical help immediately.**

Before first use

Fill to the **MAX** mark, boil, discard the water, then rinse. Do this 3 times to remove manufacturing dust, etc. Ensure that electrical connections are completely dry before using the appliance.

Safe handling

- 1** Pour water from the kettle slowly, this to prevent splashing and scalding with the hot water.
- 2** Fill the water through the spout **1** whenever possible, to help free the filter from limescale buildup. There should always be atleast the minimum amount of water in the kettle before you switch it on (**MIN** mark on the water level indicator **5**). Boil only the necessary amount of water at the time, as this can save electricity.

Switching on

- 1 Place the kettle on the base unit (8). Make sure that the kettle is locked on to the 360° connector, which allows the kettle to be put in any position (ideal for left and right handed users).
- 2 Plug the base unit into a power socket (switch the socket on, if it's applicable).
- 3 Switch the kettle **ON**. The water level indicator (5) will light up and the kettle will start heating up the water.

Switching off

- 1 Once the water is boiled the kettle will automatically switch off.
- 2 Lift the kettle from the base unit (8) and hold it level to avoid splashing the hot water. To boil the water again, place it back on the base unit (8) and switch to ON again (wait for a minute after the kettle has switched off before switching it on again).
- 3 If there is not enough water in the kettle or if it's empty, it will switch the power off automatically. To switch it back on, refill the kettle and wait a few minutes for it to cool down. Then use as normal. Using insufficient water will shorten the life of the appliance.

CARE & MAINTENANCE

- 1 **Always check that the kettle is switched off before cleaning.**
- 2 Unplug the base unit (8) (switch the socket off first, if applicable) and let the kettle cool completely.
- 3 Wipe the kettle, inside and out, with a damp cloth. Do not use abrasive cleaners on the outside of the appliance to avoid scratching the surface.
- 4 Ensure that all connectors and sockets are completely dry.

Filter removal

- 1 **Ensure that the kettle is cool.**
Open the lid (3).
- 2 Lift the filter upwards from its holder.
- 3 To fit the filter in the kettle again, slide it carefully in the side guides of the filter holder until it clicks into place. Unless the filter is fitted correctly, the kettle lid may not close and lock securely.

 
Descale even in soft water areas

- 1 This appliance is fitted with concealed heating element (6) and must be descaled regularly. The frequency of descaling depends on usage and water hardness. Excessive scale causes overheating, reduces the kettle's life and may trigger the boil-dry cut-out, as well as causing damage to the element, which invalidates the warranty.

- 2 Use appropriate descaling products suitable for stainless steel, glass or plastic and follow the provided instructions carefully.
- 3 Products returned under warranty with faults due to scale will be subject to a repair charge.

Wiring

This appliance must be earthed. Should the power cable or the power plug become damaged, arrange for these to be replaced by Customer Service or qualified person before continuing to use the appliance. This appliance is fitted with a 13A BS1362 fuse in a 13A BS 1363 plug.



Environmental protection

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



Service

The product is not user-serviceable. If it is not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it is still not working, consult your retailer. If that does not solve the problem – ring Customer Service – they may be able to offer technical advice. Please have the **Model Number** to hand, as they will not be able to help you without it. If you are advised to return the product to us, pack it carefully, include a note with your name, address, day phone number, and description of the problem. If under a warranty, say where and when it was purchased and include proof of purchase. Send it to SQ Professional Ltd.

WARRANTY

THE WARRANTY FOR THIS PRODUCT IS COVERED BY SQ PROFESSIONAL LIMITED. ANY FAULTS WITH THIS PRODUCT ARISING THROUGH A MANUFACTURER DEFECT WILL BE COVERED FOR 1 YEAR FROM THE DATE OF PURCHASE, SUBJECT TO A VALID PROOF OF PURCHASE BEING PRESENTED. THIS DOES NOT INCLUDE FAULTS OR DAMAGE CAUSED BY MISUSE OF GENERAL WEAR AND TEAR. PLEASE CONTACT CUSTOMER SERVICES ON **01992 716 070** OR SEND AN EMAIL TO **INFO@SQPROFESSIONAL.COM**, MONDAY TO FRIDAY FROM 09:30 - 17:30. THIS DOES NOT AFFECT YOUR STATUTORY RIGHTS.



SQ professional

Voltage Business Centre, Units 1 - 3
6 Mollison Avenue, Enfield, EN3 7XQ

T: 01992 716 070 | F: 01992 700 538 | info@sqprofessional.com

WWW.SQPROFESSIONAL.COM